



FLIGHT DATA / 78V
★★★★★
\$169.00



GMT, LT, &


SC-5 Operating Instructions

General Description:

The SC-5 is a Super Clock instrument packaged in a 2.5" by 2.5" by 3.65" depth case. The instrument uses a quick disconnect circular connector to allow the SC-5 to be removed from the instrument panel at any time. The SC-5 uses a clock IC incorporating a 10 year lithium battery.

The SC-5 has the following five display modes:

1. "LOCAL" Clock - In this mode the SC-5 will display Local Time. The Local Clock may be programmed to display in a 12 or 24-hour format.
2. "ZULU" Clock - In this mode the SC-5 will display Zulu Time.
3. "UP" Timer - In this mode the SC-5 will display the "UP" Timer. This Timer counts up and starts automatically when your aircraft's Master Switch is turned on. In this way the Timer acts as a Flight Timer. Also, a pilot programmable Recurring Alarm may be set to alert you at appropriate time intervals. Example: If the alarm is set for 30 minutes, you will get an alarm at 30 minutes, 60 minutes, 90 minutes, etc. This alarm can be used to remind you to check your fuel level, course, position or instruments at set time intervals. The alarm Warning LED marked "UP" over the digital display will "blink" when the programmed time interval is reached. The "START/STOP" and "RESET" Buttons control this Timer.

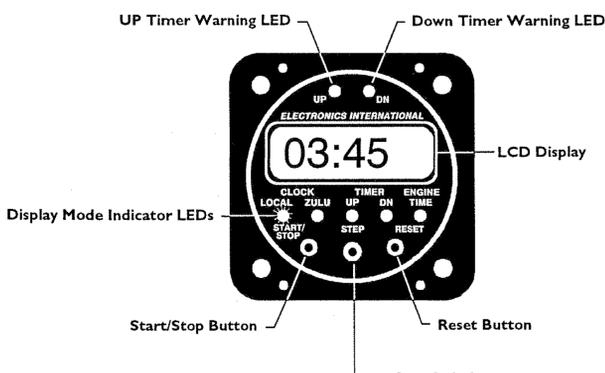

Contact

Toll Free: 877-477-7823
Sales: 800-861-5622
Customer Service: 800-861-5622
Fax: 800-329-2727

Location & Shipping

West - Corona, CA
Midwest - Westfield, MA
East - Peachtree City, GA
Alaska - Wasilla, AK
Canada - Brampton, ON
International - Worldwide

California Privacy Policy
By using this web site, you agree to our
Copyright © 1993-2023